


# HOME DECORATORS COLLECTION

BF-24888 MSL ENTRY BENCH 47"W×21"D×38"H

INV#10356









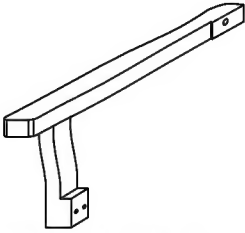
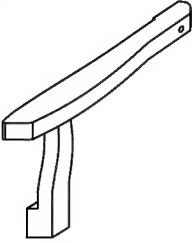
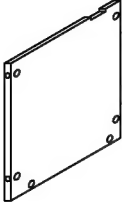

## ASSEMBLY INSTRUCTIONS



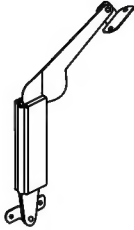
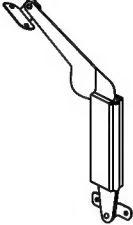


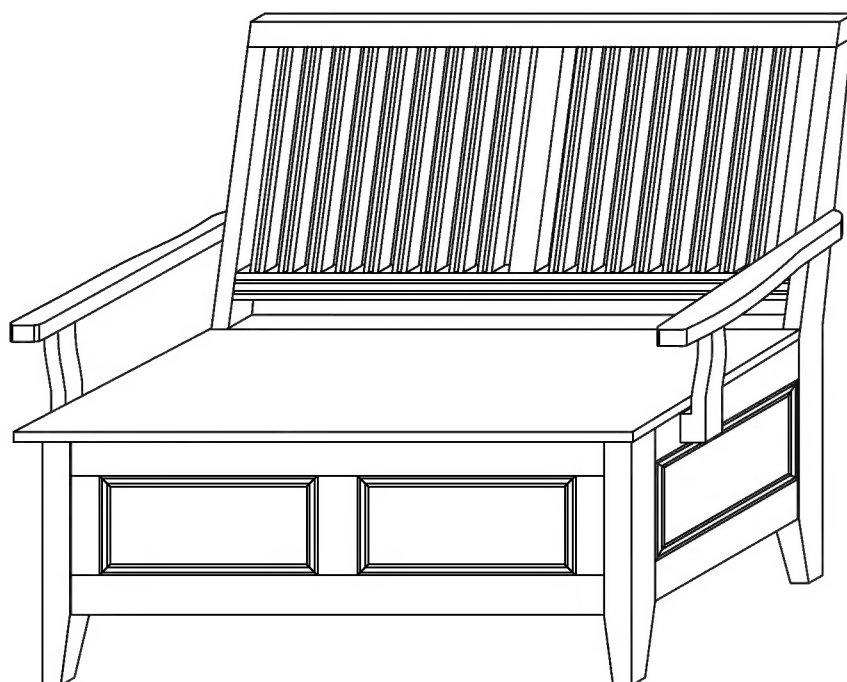
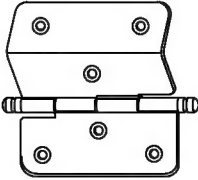




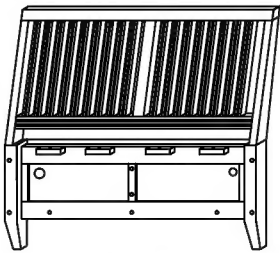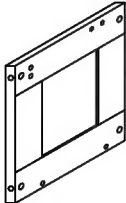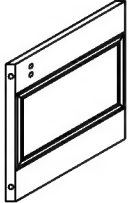

Made In China



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed. IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.



## PARTS LIST

<b>A</b>  FRONT PANEL - 1PC	<b>B</b>  BACK PANEL - 1PC	<b>C</b>  LEFT SIDE PANEL - 1PC
<b>D</b>  RIGHT SIDE PANEL - 1PC	<b>E</b>  SMALL TOP PANEL - 1PC	<b>F</b>  LARGE TOP PANEL - 1PC
<b>G</b>  BOTTOM PANEL - 1PC	<b>H</b>  PANELS - 2PCS	<b>I</b>  LEFT HANDRAIL - 1PC
<b>J</b>  RIGHT HANDRAIL - 1PC	<b>K</b>  STAND PANEL - 1PC	<b>L</b> 11mm×1 - 1/4"  SCREWS - 6PCS

<b>M</b>  ALLEN WRENCH - 1PC	<b>N</b> 8mm×1 "  SCREWS - 4PCS	<b>O</b>  LEFT HARDWARE - 1PC
<b>P</b>  RIGHT HARDWARE - 1PC	<b>Q</b> 6mm×1 / 2 "  SCREWS - 4PCS	<b>R</b>  CAM - LOCKS - 24PCS
<b>S</b>  CAM - BOLTS - 24PCS	<b>T</b>  HINGES - 3PCS	<b>U</b> 6mm×3 / 4 "  SCREWS - 12PCS
<b>V</b>  SCREW COVERS - 2PCS	<b>W</b> 11mm×3 / 4 "  SCREWS - 4PCS	<b>Y</b>  CAM - TOOL - 1PC
<b>Z</b> 6mm×1 / 2 "  SCREWS - 6PCS	<b>A1</b> 6mm×3 / 4 "  SCREWS - 4PCS	




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

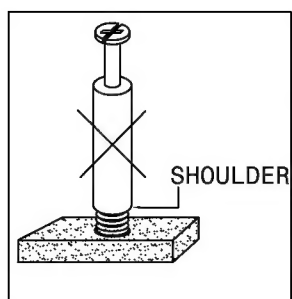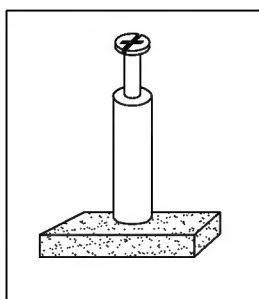


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

## HOW TO USE THE CAM-TOOL

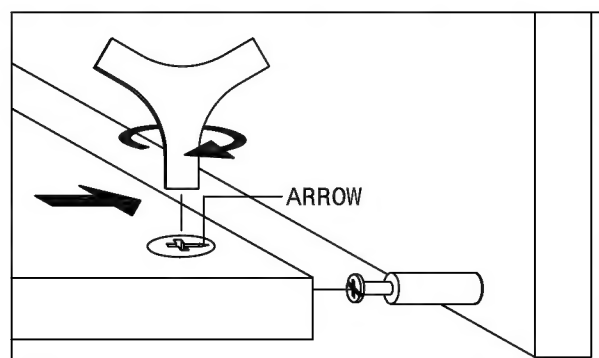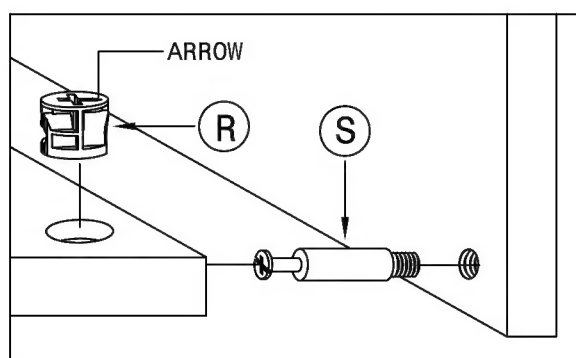


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

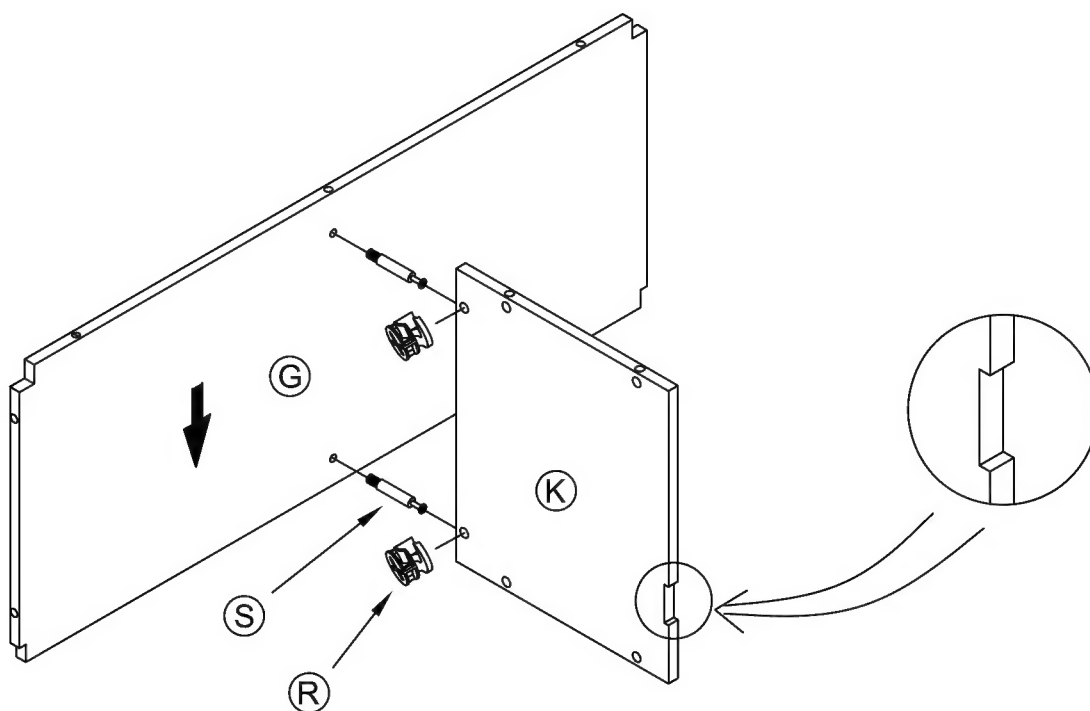


### 1) . ASSEMBLE THE BOTTOM PANEL (G) .

- ROTATE THE 2 CAM-BOLTS(S) INTO THE HOLES IN THE BOTTOM PANEL (G) .
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE STAND PANEL (K) AND ATTACH USING 2 CAM-LOCKS(R) .

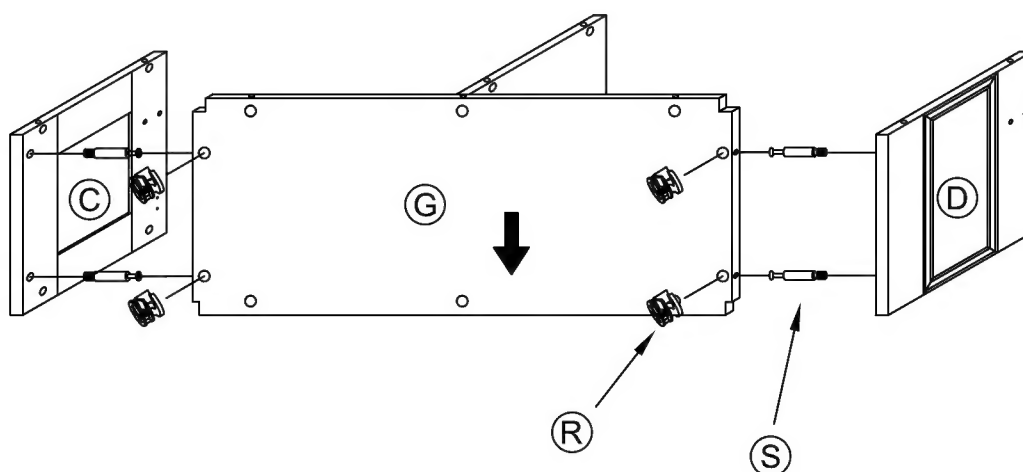


### 2) . ASSEMBLE THE BOTTOM PANEL (G) .

- ROTATE THE 4 CAM-BOLTS(S) INTO THE HOLES IN THE SIDE PANEL (C/D) .
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE BOTTOM PANEL (G) AND ATTACH USING 4 CAM-LOCKS(R) .

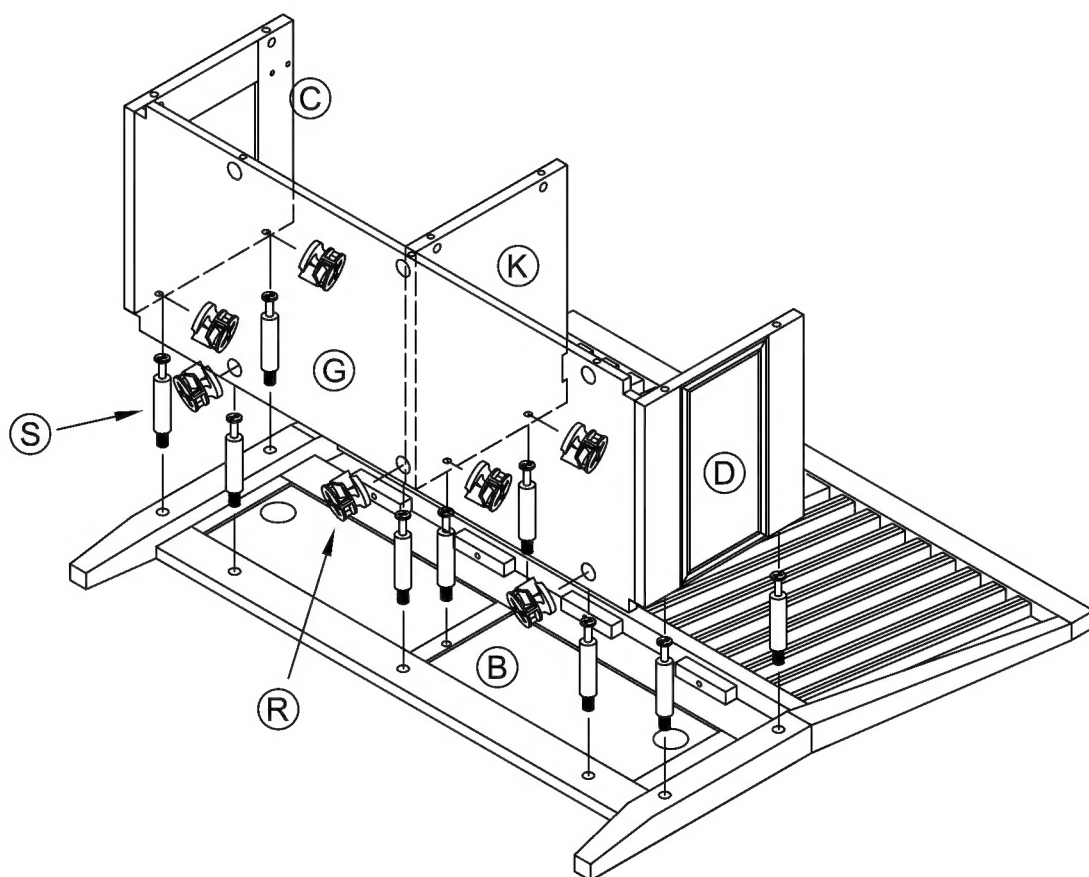


### 3) . ASSEMBLE THE BACK PANEL(B) .

- ROTATE THE 9 CAM-BOLTS(S) INTO THE HOLES IN THE BACK PANEL(B) .
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE PANEL(C/D/G/K) AND ATTACH USING 9 CAM-LOCKS(R) .

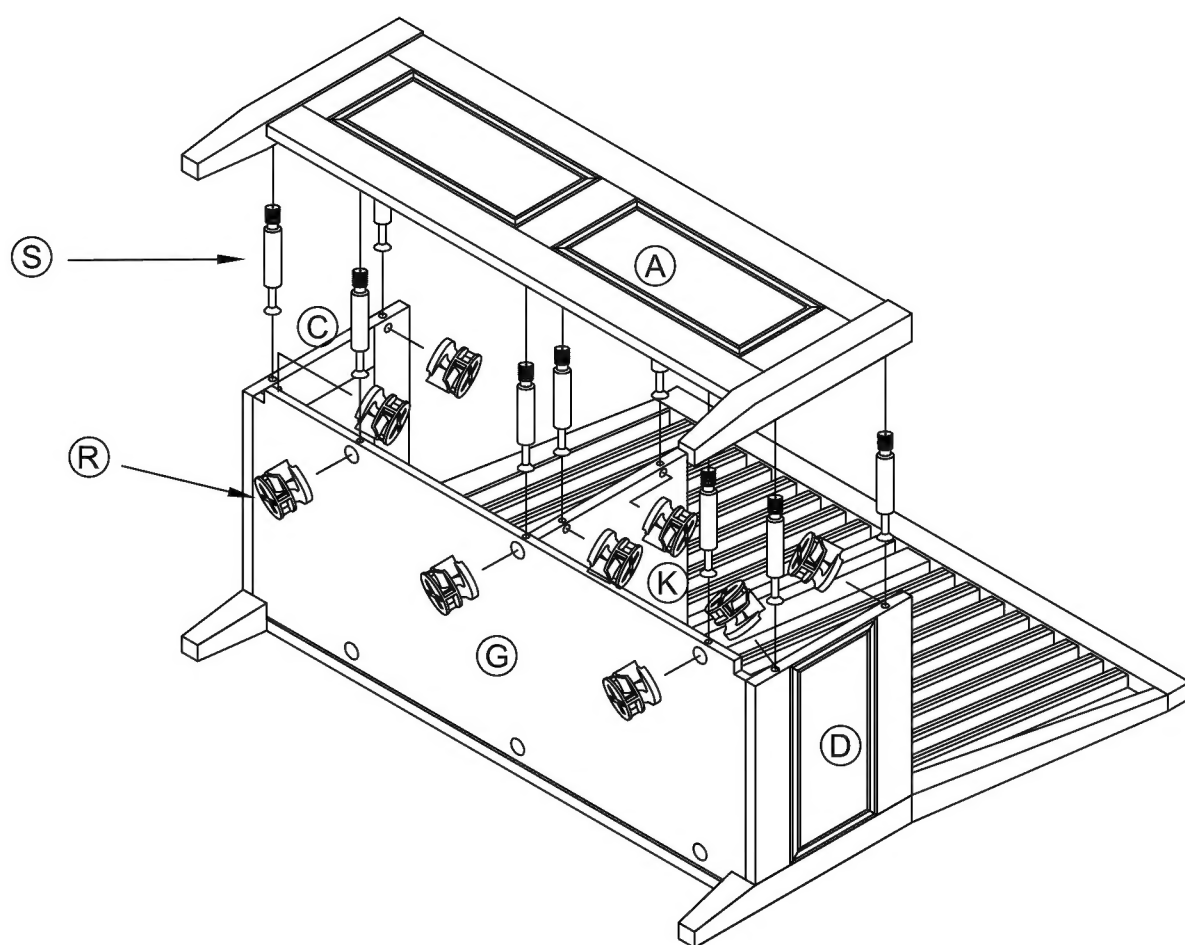


#### 4) . ASSEMBLE THE FRONT PANEL(A) .

- ROTATE THE 9 CAM-BOLTS(S) INTO THE HOLES IN THE FRONT PANEL(A) .
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE PANEL(C/D/G/K) AND ATTACH USING 9 CAM-LOCKS(R) .

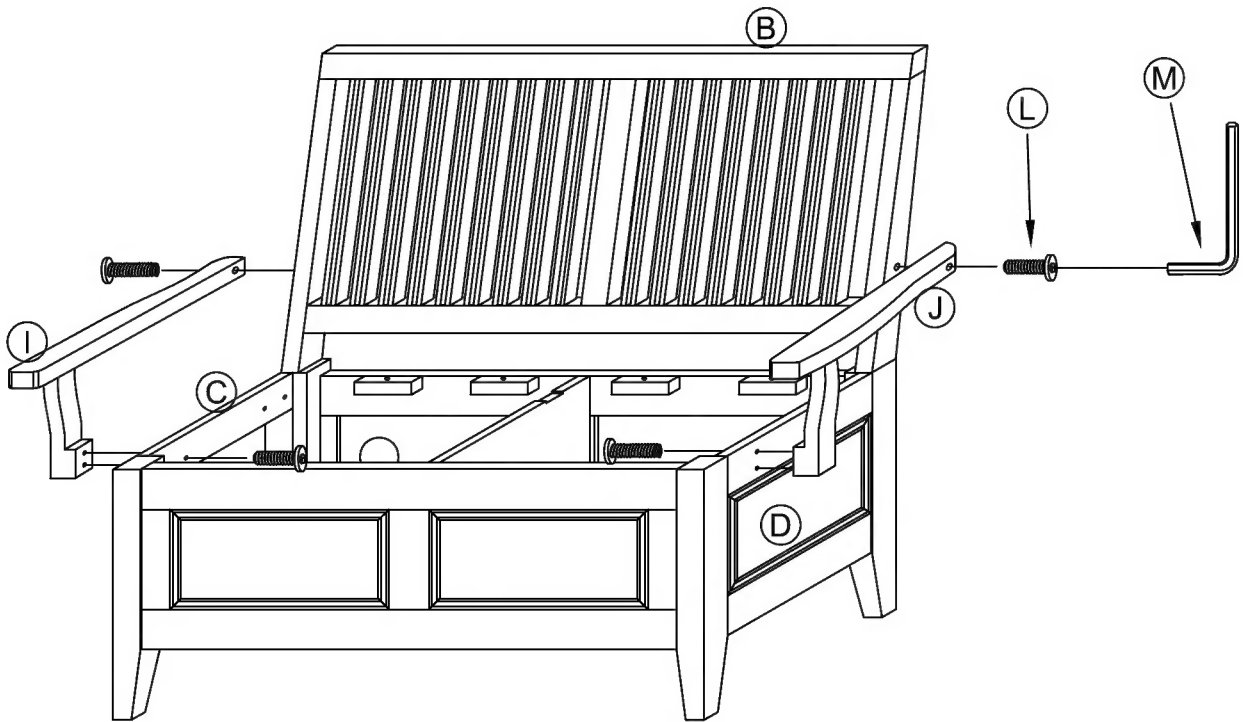

#### 5) . ASSEMBLE THE HANDRAIL(I/J) .


- ATTACH THE LEFT/RIGHT HANDRAIL(I/J) TO PANEL(C/D/B) USING 6 SCREWS(L) .

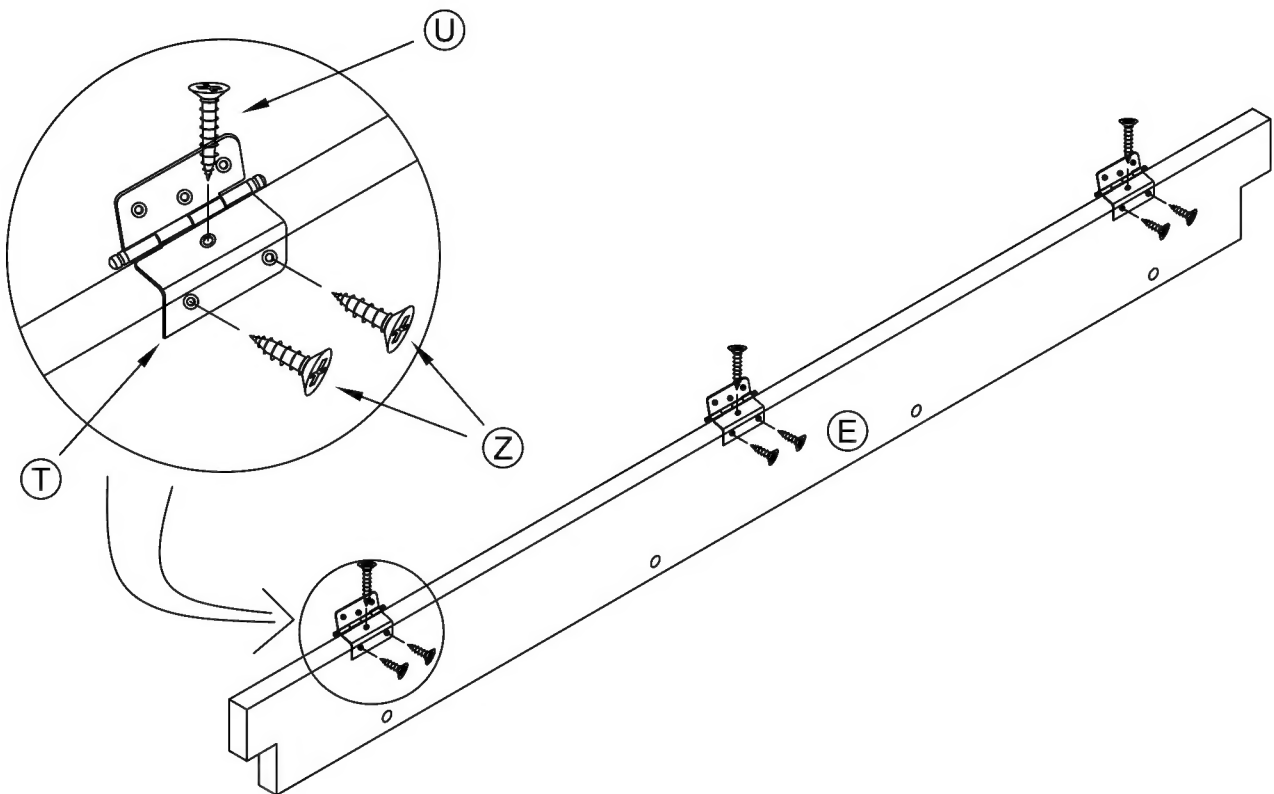

#### 6) . ASSEMBLE THE HINGES(T) .


- ATTACH THE 3 HINGES(T) TO SMALL TOP PANEL(E) USING SCREWS(U/Z) .



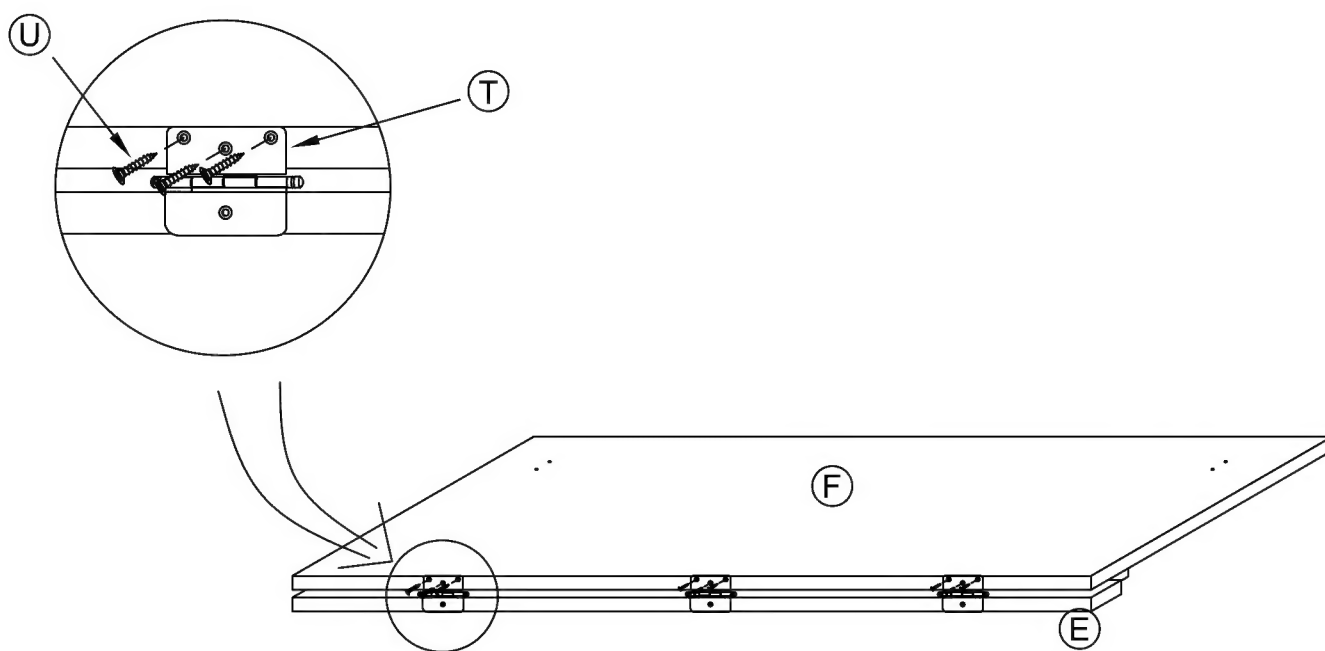


### 7) . ASSEMBLE THE LARGE TOP PANEL (F) .

- ATTACH THE LARGE TOP PANEL (F) TO HINGES (T) USING 9 SCREWS (U) .

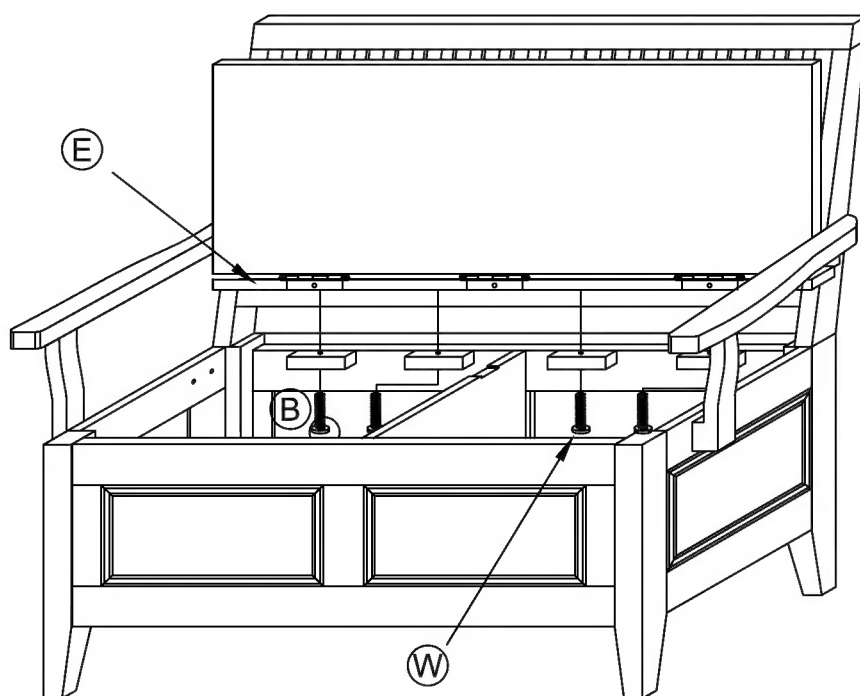



### 8) . ASSEMBLE THE SMALL TOP PANEL (E) .

- ATTACH THE SMALL TOP PANEL (E) TO BACK PANEL (B) USING 4 SCREWS (W) .

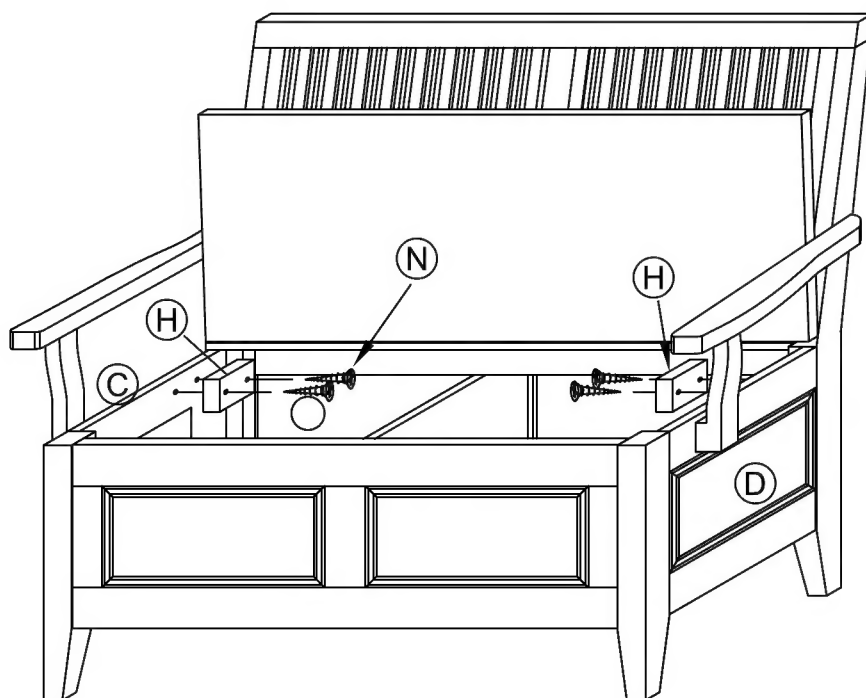


### 9) . ASSEMBLE THE PANELS(H) .

- ATTACH THE 2 PANELS(H) TO SIDE PANEL(C/D) USING 4 SCREWS(N) .

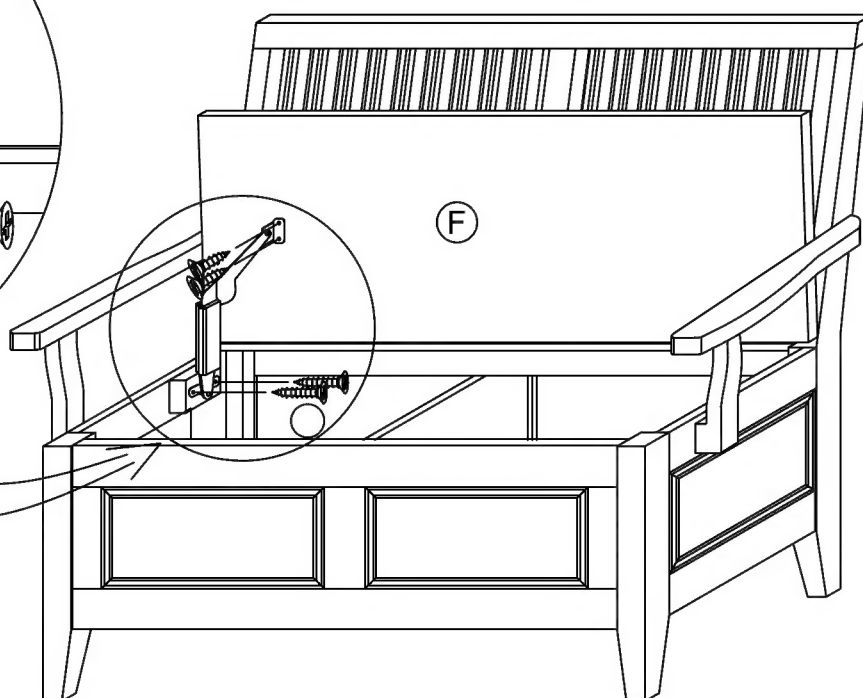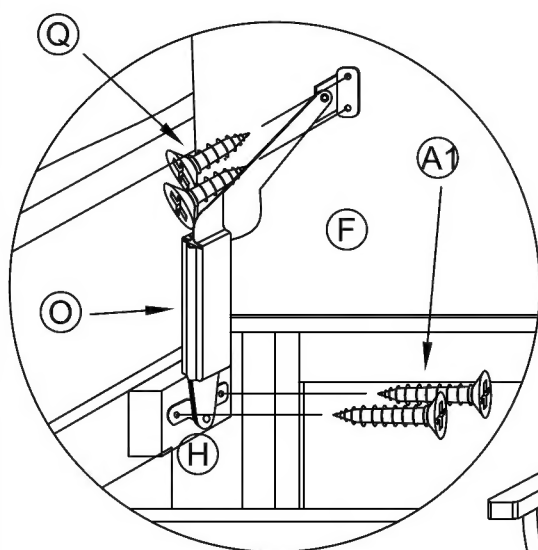


### 10) . ASSEMBLE THE LEFT HARDWARE(O) .

- ATTACH THE LEFT HARDWARE(O) TO PANEL(H/F) USING SCREWS(Q/A1) .

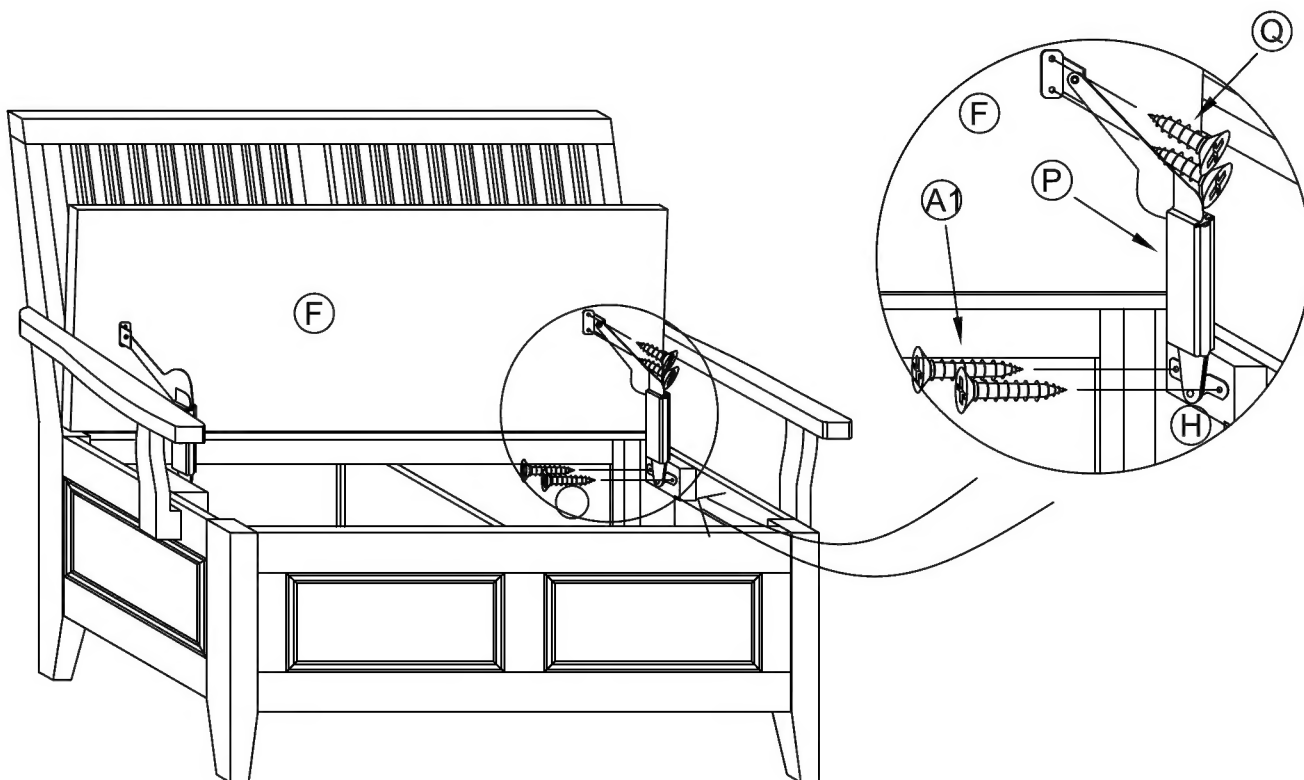

### 11) . ASSEMBLE THE RIGHT HARDWARE(P) .

- ATTACH THE RIGHT HARDWARE(P) TO PANEL(H/F) USING SCREWS(Q/A1) .

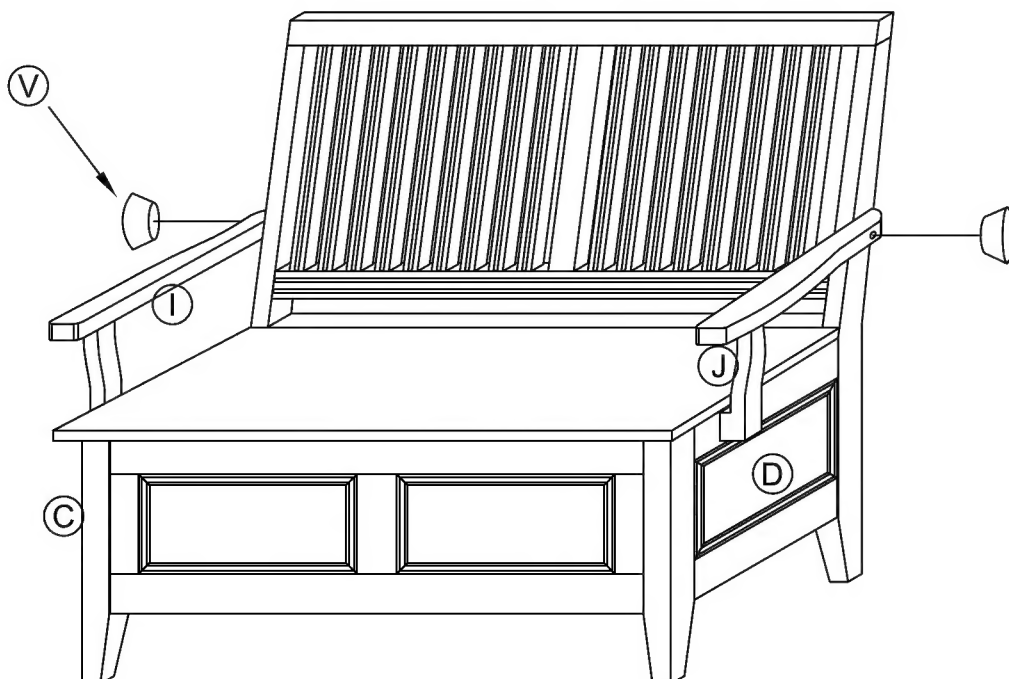

### 12) . ASSEMBLE THE SCREW COVERS(V) .

- ATTACH THE 2 SCREW COVERS(V) INTO THE HOLES IN THE PANEL(I/J) .